


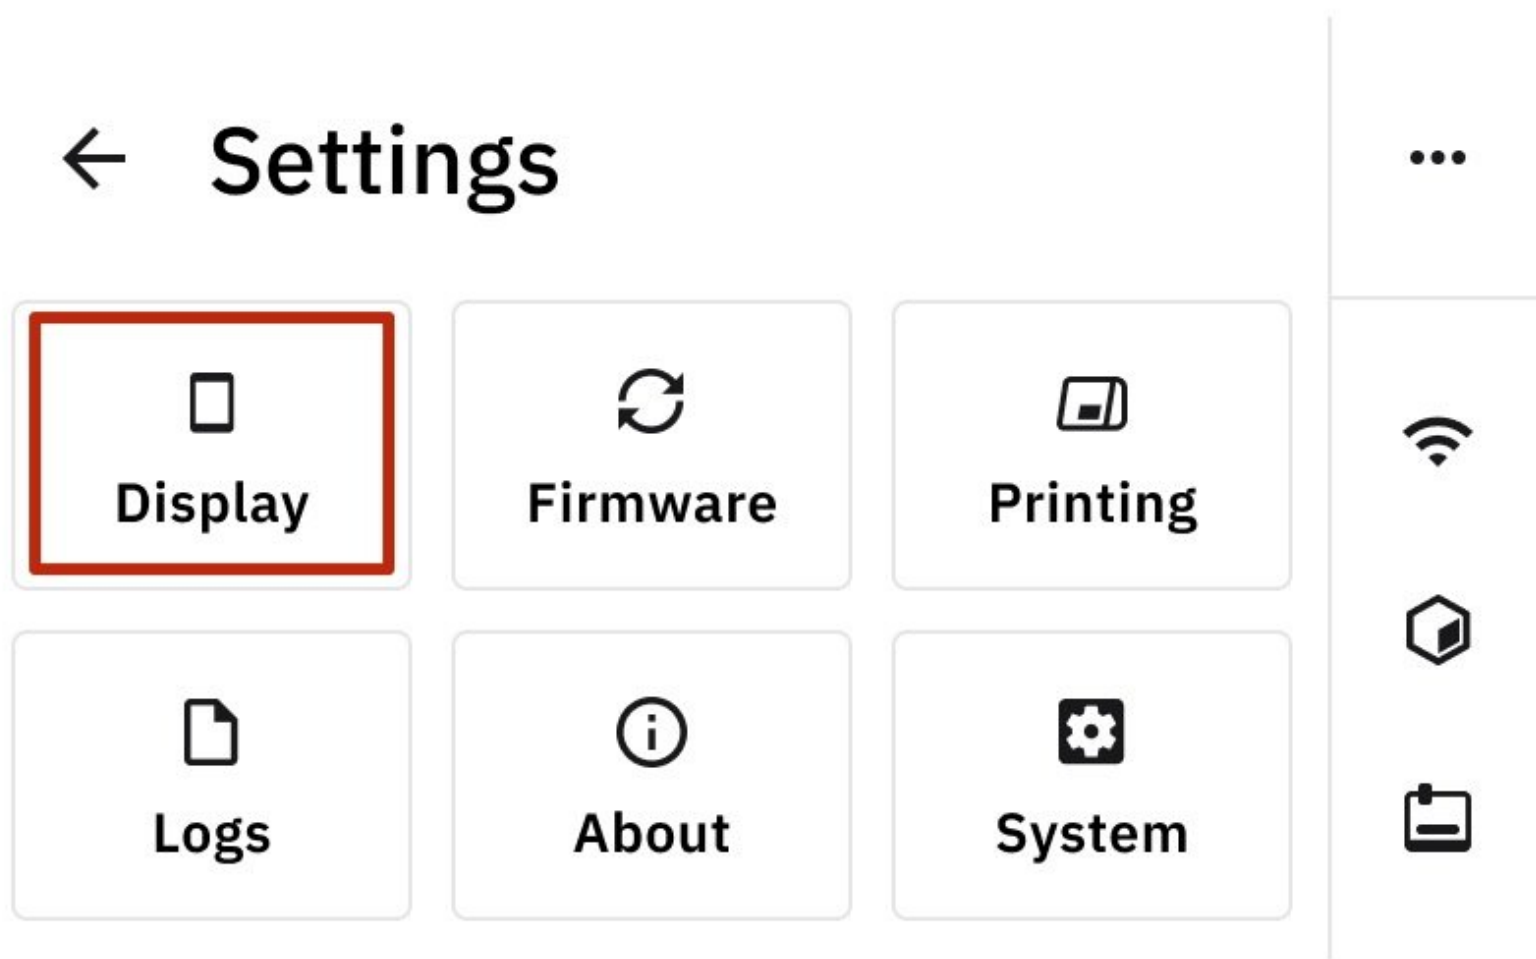

# Display Settings

How to change Dark Mode, Screen Saver, Rotate Screen, Brightness display settings

Written By: Mosaic Support




# INTRODUCTION

In this guide, you will learn how to:


- Change display settings on Palette 3, including how to enable dark mode, set a screensaver, rotate the display and adjust brightness settings.

## Step 1 — Display

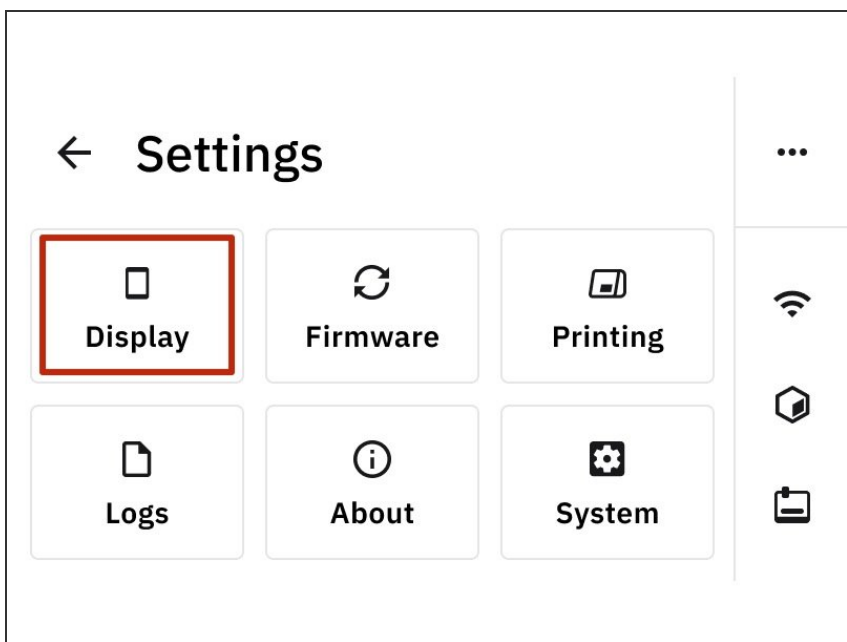


- Go to *Settings > Display* to see make changes to the following:
  - Dark Mode
  - Screen Saver
  - Rotate Screen
  - Brightness

## Step 2 — Dark Mode

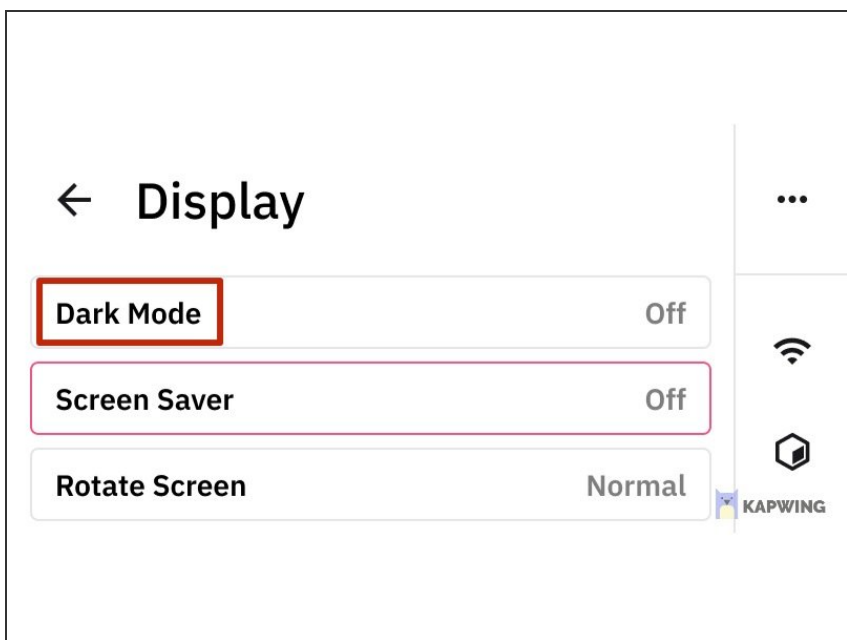


- This setting changes the color and lighting display between bright and dark.
- Tap *Dark Mode > On*.

### Step 3 — Screen Saver

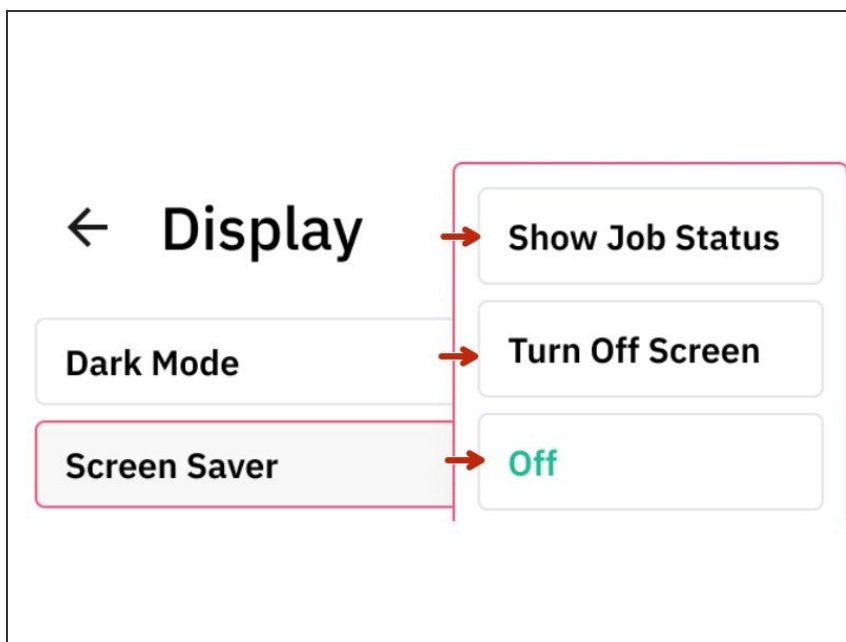


- To select what to display when Palette 3 is idle. Tap *Display > Screen Saver*.
- *Screen Saver > Show Job Status*
- *Screen Saver > Turn Off Screen*
- *Screen Saver > Off*

### Step 4 — Rotate Screen

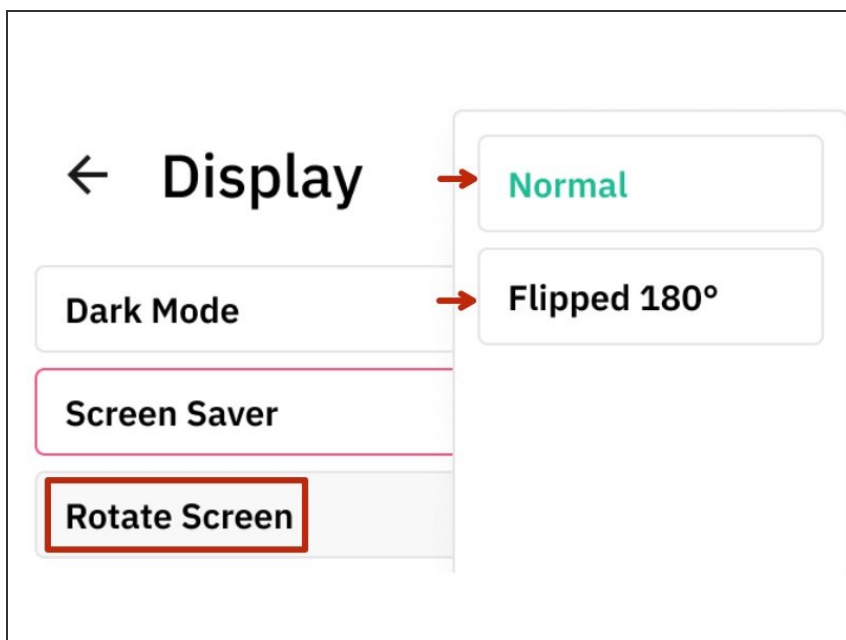

- This can be used for mounting Palette 3 upside down or other setups. To access this setting tap *Display > Rotate Screen*.
- To have the screen upright: *Rotate Screen > Normal*.
- To rotate the screen tap: *Rotate Screen > Flipped 180°*

## Step 5 — Brightness

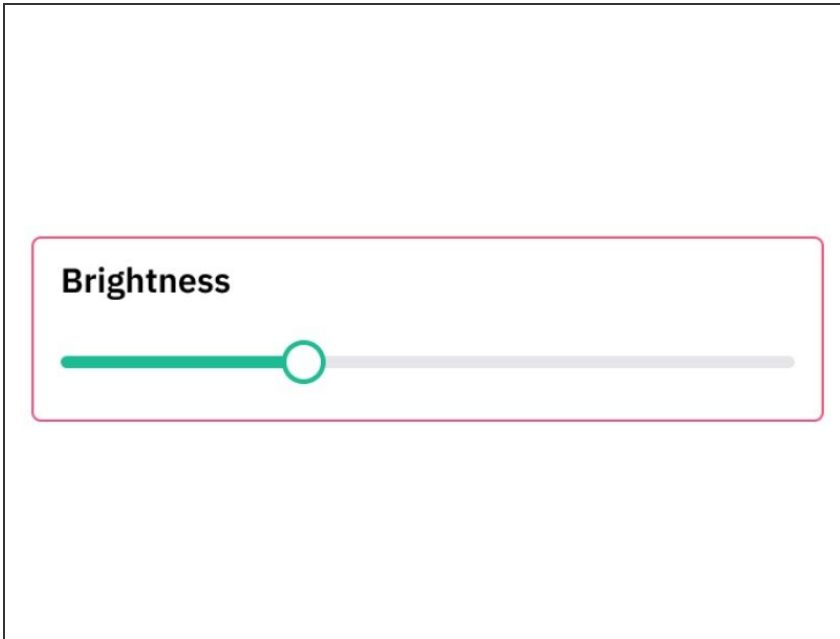

- To adjust the brightness of the screen tap *Display > Brightness*.
- Drag *Brightness* slider left to decrease brightness.
- Drag *Brightness* slider right to increase brightness.

If you have any additional questions, please send us a message at [support@mosaicmfg.com](mailto:support@mosaicmfg.com).