



Access Information About your Palette

This guide will show you how to access information about your Palette as well as how to logout of your Canvas account.

Written By: Hana




INTRODUCTION

In this guide you will learn how to:


- Access filament length, splice, serial number and splice core information on your Palette
- View total number of lifetime splices on unit, and number of splices with current splice tube
- Logout of your Canvas Account

Step 1 — Navigating to the About Menu

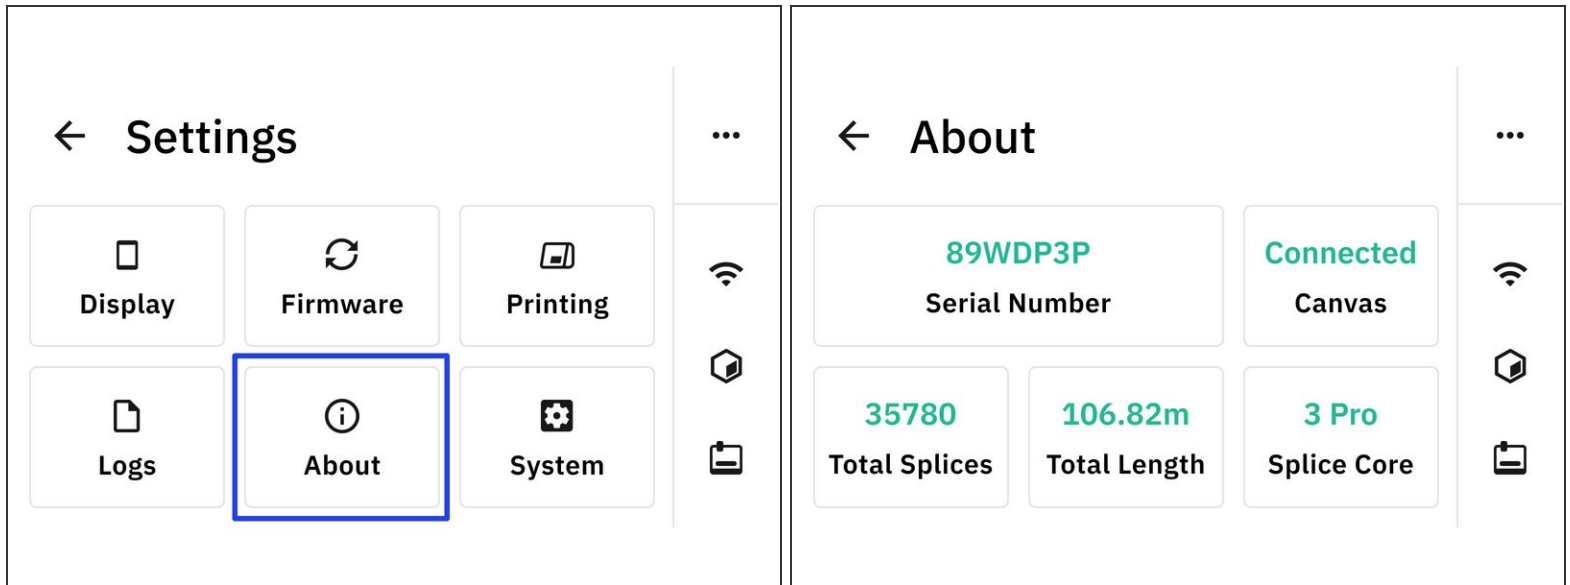


- From Palette's main screen, tap *Settings* > *About*.
- This screen will provide important data on your Palette, which could be used for warranty or mileage tracking purposes.

Step 2 — Viewing Splice Counts

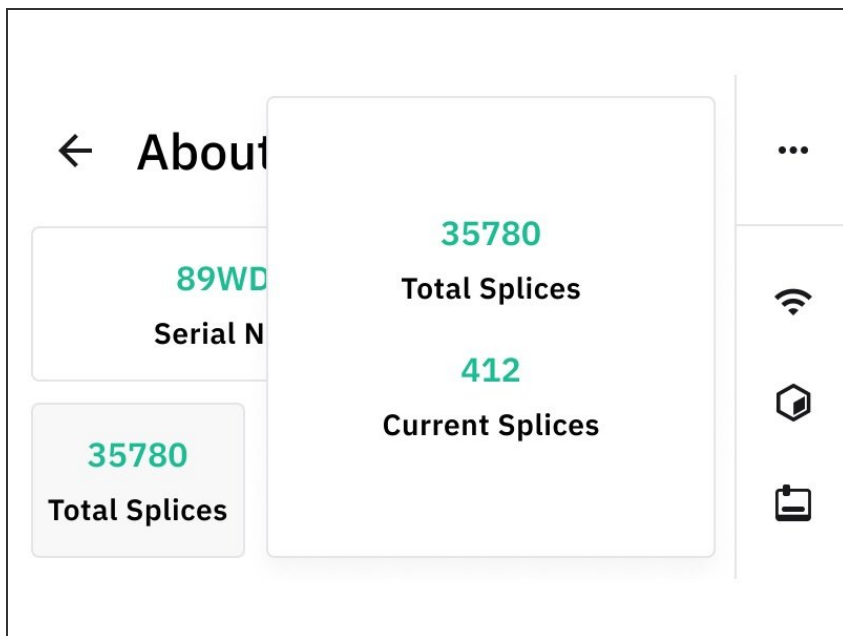

- *Total Splices* represents the lifetime number of splices on the unit. This value cannot be reset.
- *Current Splices* represents the number of splices completed with the current splice tube installed.

Step 3 — Log In/Out of your Canvas Account

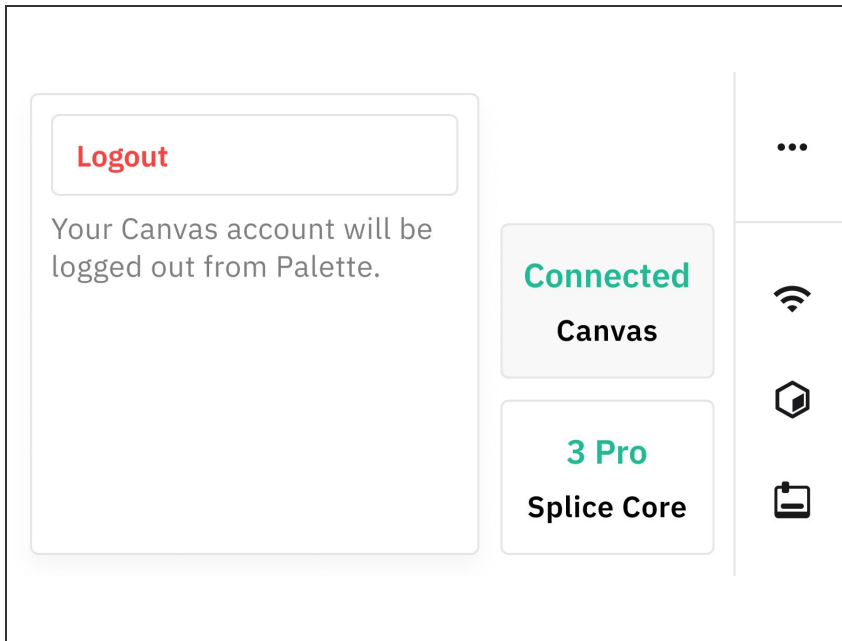

- **To Login to your Canvas account:** Tap *About* > *Canvas* > *Login*. Enter your information.
- **To Logout of your Canvas account:** Tap *About* > *Canvas* > *Logout*.

If you have any additional questions, please send us a message at support@mosaicmfg.com!