




# Cura and Chroma Setup

This guide will take you through how to set up Cura to work with Chroma and Palette.

Written By: Mosaic Support

## Chroma

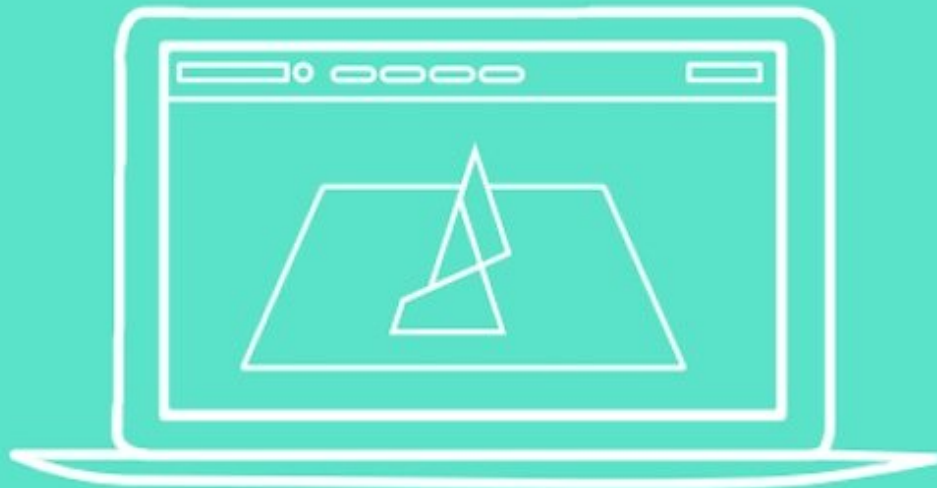

## INTRODUCTION

This article will help users add additional extruders to Cura (v2.0 - 3.3) in order to slice for Palette. To learn how to set up Cura V15.x.x for Palette, please see [this tutorial](#).

## Step 1 — Create a New Printer Profile

**Machine Settings**

Printer Extruder 1 Extruder 2 Extruder 3 Extruder 4

**Printer Settings**

X (Width) 300 mm  
Y (Depth) 300 mm  
Z (Height) 300 mm

Build plate shape Rectangular  
☐ Origin at center  
☐ Heated bed

Gcode flavor Marlin

**Printhead Settings**

X min 20 mm  
Y min 10 mm  
X max 10 mm  
Y max 10 mm  
Gantry height 999999999 mm

Number of Extruders 4  
Material diameter 1.75 mm

**Start Gcode**

```
G28 ;Home
G1 Z15.0 F6000 ;Move the platform down 15mm
;Prime the extruder
G92 E0
G1 F200 E3
G92 E0
```


**End Gcode**

```
M104 S0
M140 S0
;Retract the filament
G92 E1
G1 E-1 F300
G28 X0 Y0
M84
```

Back Finish Cancel


- If you already have a printer profile in Cura, open this profile's machine settings (*Settings > Printer > Manage Printers > Machine Settings*).
- Copy your Start and End GCode to a document for later use if you see any in your settings.
- Add a new printer (*Settings > Printer > Add Printer*).
- Add a Custom FDM printer even if your printer is on the list. Even if you have an existing printer profile, there is currently no way to copy a machine and add extruders in Cura.
- Fill in your printer's information, including dimensions and settings. Set the number of extruders to 4 and the diameter to 1.75 mm.

## Step 2 — Create a Duplicate Material Profile

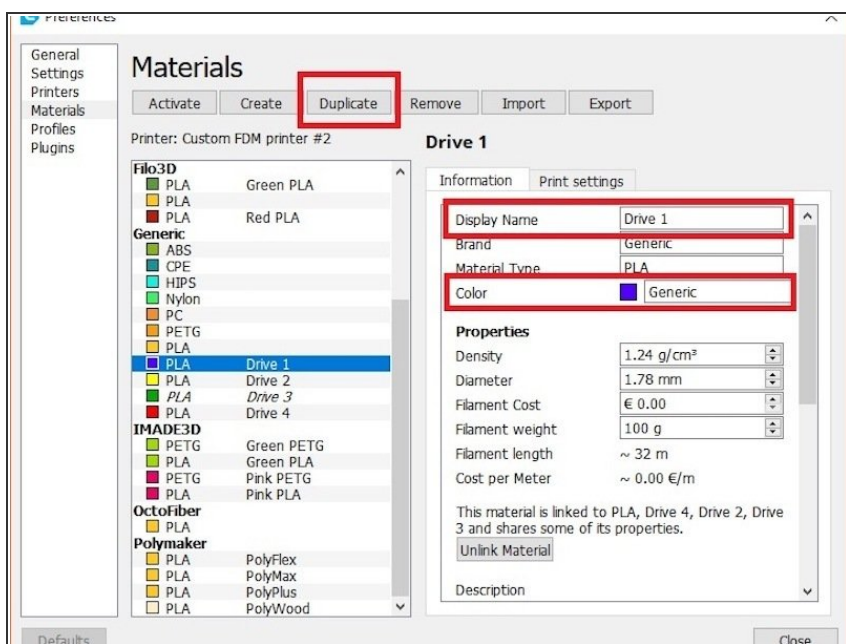


- Under the Extruder tab for each extruder, enter your nozzle diameter and ensure that the other fields are empty or 0 (including start and end GCode).
- Click **Finish** to return to the home screen.
- On Cura's main menu, go to *Settings > Extruder 1 > Materials > Manage Materials*. On this screen, select the material you would like to print with (ex. PLA) and create a Duplicate. Under the Information tab, update the name and assign different colours. This will help distinguish between extruders and profiles.

## Step 3 — Set the Standby Temperature

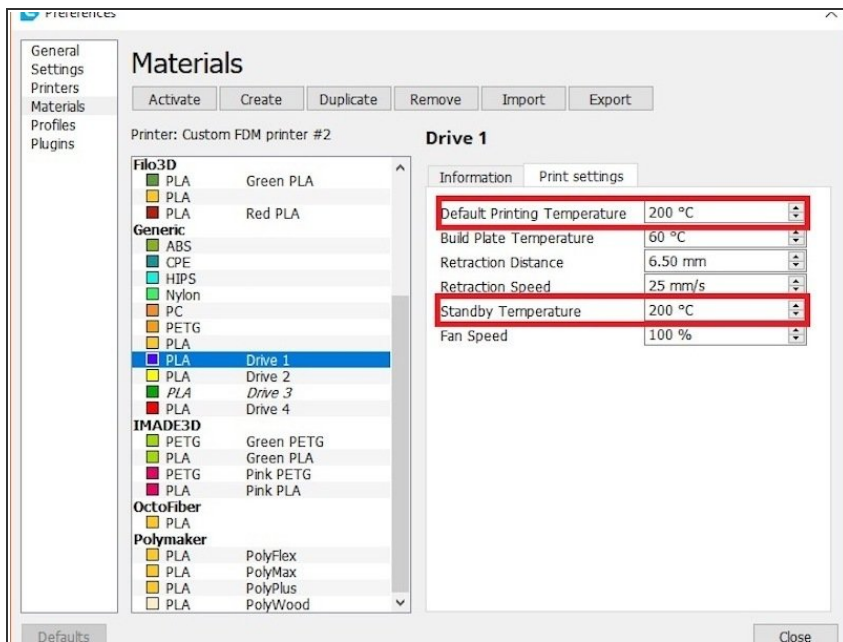


- Under the Print Settings tab, set the **Standby Temperature** to be the same as the **Default Printing Temperature**. Repeat this steps for 4 different profiles (one for each extruder). Once updated, click **Close** to return to the home screen.

## Step 4 — Assign Material Profile to Each Extruder

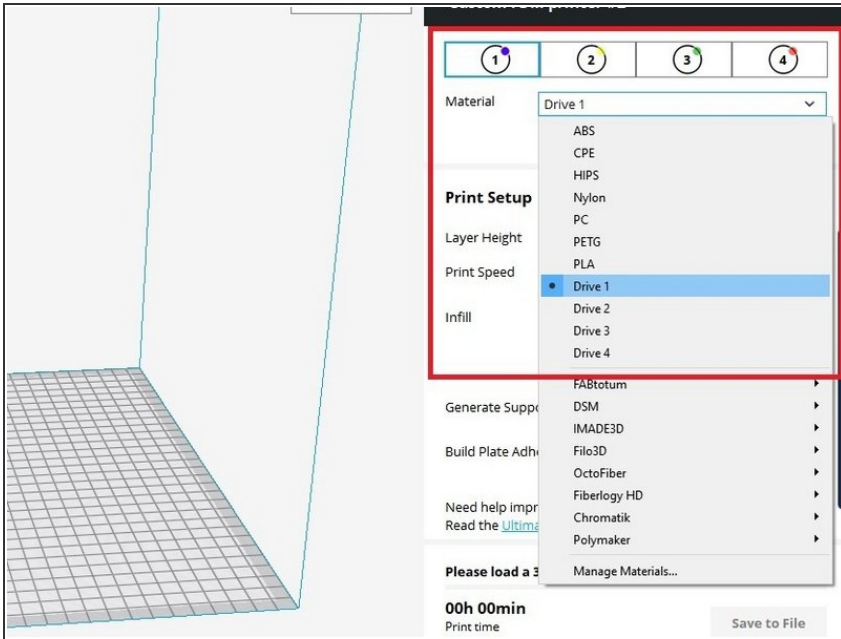

- At the top of the right banner, you can assign each material profile to an extruder. Please ensure that all 4 profiles are the same for each extruder.

## Step 5 — Set Initial and Final Printing Temperature

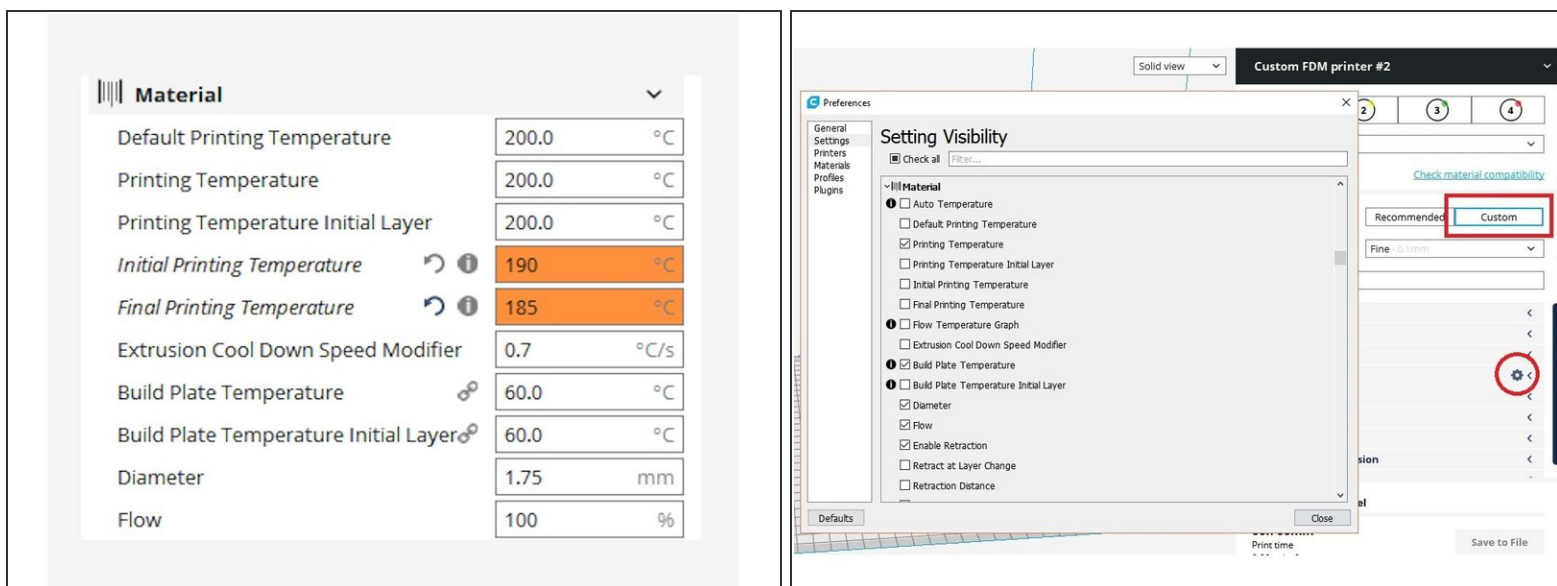

- Set the **Initial Printing Temperature** and **Final Printing Temperature** to be the same as your **Printing Temperature**.
- This is found on the right side of the home screen under **Printer Setup**, select **Custom**, which will expand a menu allowing you to change the profile settings. Hover over the Material tab on the home screen and you'll see a gear symbol appear. Clicking this will further expand the menu of customizable settings.
- Ensure that **Standby Temperature** and **Nozzle Switch Retraction Distance** are also selected.

## Step 6 — Set Temperature in Material Profiles

Custom FDM printer #2

1 2 3 4

Material: Drive 1

[Check material compatibility](#)

**Print Setup**

Recommended Custom

Profile: Fine 0.1mm

Search...

**Infill**

**Material**

Printing Temperature: 200 °C

Diameter: 1.75 mm

Flow: 100 %

Enable Retraction: ☒

Standby Temperature: 200.0 °C

Nozzle Switch Retraction Distance: 0 mm

**Ready to Save to File**

**12h 12min**


Print time: 21.42g + 4.16m / ~ 63 + 12g

Save to File

- Back under the Material category, set the **Printing Temperature** and the **Standby Temperature** to be equal and set the **Nozzle Switch Retraction Distance** to 0. Repeat this for all 4 material profiles.



## Step 7 — Slice!

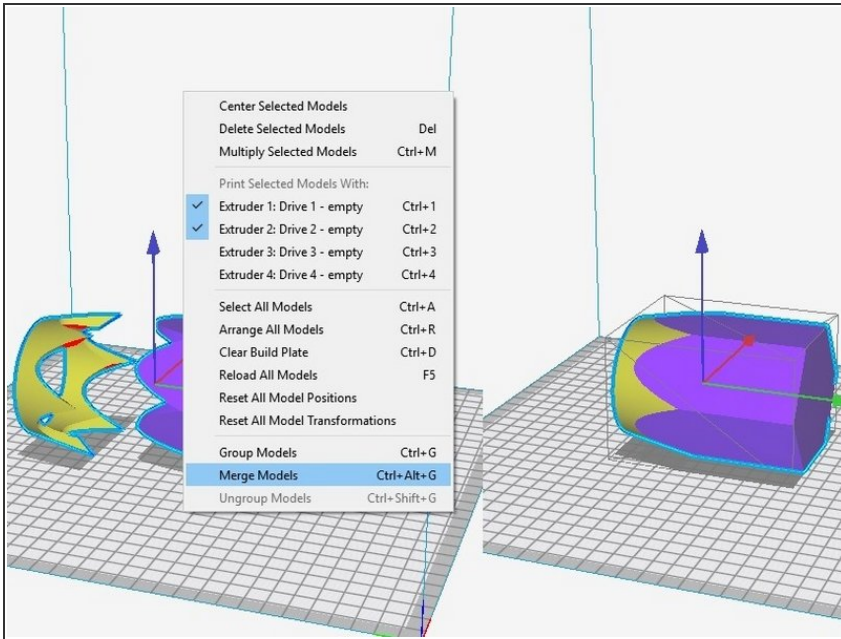

- Now you're set to slice! When you load multiple STL files, you can assign an extruder for each file which will colour-coordinate with the material profile.
- Do this by right-clicking an STL and selecting an extruder for it. Once all files are loaded and assigned, select all parts by holding the "Shift" key and clicking each part of the model, then right-click and select **Merge Models**.
- Please ensure that all pieces are loaded and assigned to different extruders before merging, as you are unable to assign extruders once the model is merged.

## Step 8 — Troubleshooting



- For more recent versions of Cura (V3.4 on), we've seen issues with temperature changes in the GCode that causes the extruder to pause over prints, causing blobbing and quality issues. This is due to Cura adding a number of M109 commands that causes the extruder to pause as it heats and cools. To eliminate this issue, please follow these steps:
  - On your computer, find the path **C:\Users\%user%\AppData\Roaming\cura\3.3\definition\_changes\“your printer”\_settings.inst.cfg**
  - Add **“machine\_nozzle\_temp\_enabled = False”** to the [values] section. This disables Cura from overriding any temperatures changes in the GCode.
  - Add **“M109 S200”** to the startup GCode.

## Step 9 — Troubleshooting



- We've also seen that additional lines are included in the GCode that can cause issues with the nozzle temperature.
- If you're using Cura 3.6 or newer, we would suggest using a program such as [Notepad++](#) to Find and Replace lines that contain '**M104 T0 S0**'. You'll need to delete these lines or they will cause your nozzle to cool to 0 degrees.
- You can also check that the last colour to print is assigned to the first extruder, helping to avoid this issue in the GCode.
- Cura versions newer than V3.4 may cause additional issues and may require you to downgrade to previous versions of Cura.

If you have any questions, please contact us at [support@mosaicmfg.com](mailto:support@mosaicmfg.com).